

# Drywall Knockouts

## Conveniently placed holes for easy installation of wiring, plumbing and bridging

- Pre-punched at regular intervals
- Designed to accept the installation of standard grommets
- Custom hole placement available on request

Dietrich UltraSTEEL® studs for interior nonload-bearing, nonstructural framing are pre-punched with knockouts at regular intervals. These punch-outs are specifically designed to allow for the rapid installation of pipes, electrical conduit, wiring and bridging.




1-1/2" wide knockout in 3-5/8" and wider studs




3/4" wide knockout in 1-5/8" and 2-1/2" studs

**CAUTION:** Care must be taken during installation to ensure consistent alignment of knockouts. Conduit, grommets, bangers or insulators must be used to keep mechanical piping and electrical wires from direct contact with the steel.

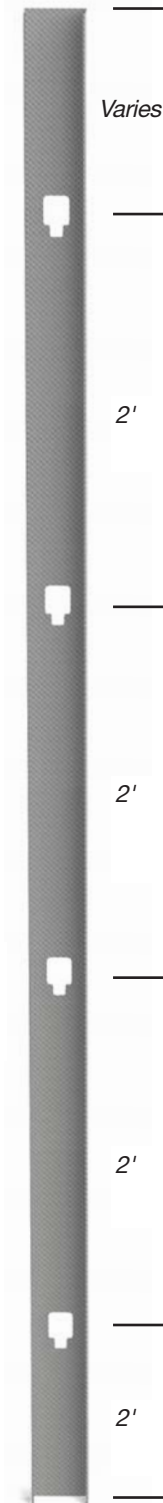

West Coast Punch Pattern

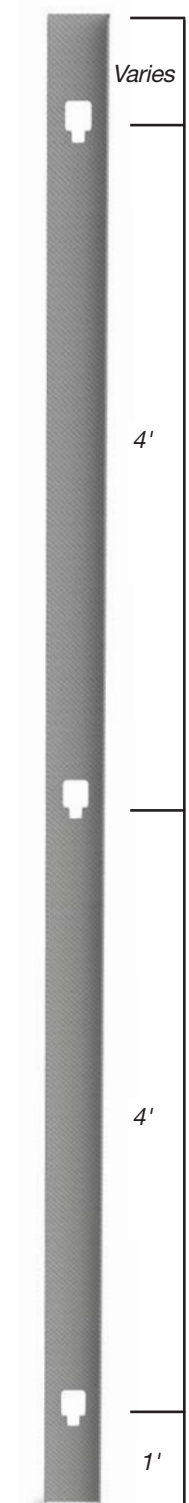

East and Central Punch Pattern

Interior (Drywall) Nonload-Bearing UltraSTEEL® Framing